

FOS TOUR PAR 150

User Manual





Thanks for choosing our goods please read this manual carefully before your operating and keep this manual for future needs

Thank you for purchasing LED Tour Par 150, Every unit has been thoroughly tested and has been shipped in perfect operating condition.

Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact the manufacturer or your dealer for further instructions. You now own a professional lighting unit that offers endless possibilities.

For your own safety and that of others, please read this instruction manual carefully before installing the unit.

Anyone involved in installing, operating or servicing the LED Tour Par 150

must: • Be a qualified, authorized professional

•Strictly follow the instructions in this user manual.

Please take the time to read this manual carefully and thoroughly before installing and operating the luminaire. You should have a good knowledge of its operating conditions and all pertinent product

information.

After you have become familiar with this manual, we recommend that you keep a copy for future use. All the information found in this manual is subject to change without notice. We reserves the right to modify and upgrade its range of products, with no obligation to integrate these changes into products already sold.

Warning

- To prevent or reduce the risk of electrical shock or fire ,do not expose the unit to rain or moisture.
- Do not open the unit within five minutes after switching off.
- Please consider that damages caused by manual modifications to the device are not subject to warranty.

Installation

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. And make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.

The equipment must be fixed by professionals. And it must be fixed at a

place where is out of the touch of people and has no one pass by or under it.

Specifications and Features:

LEDs: 150W RGBW 4in1 LEDs

Power Consumption:150W

• DMX Channels: 11 DMX Channels

PMW Rate: 900Hz~10000Hz

• Dimmer Curve: 4 dimmer curve mode

6 DMX Channels Mode: 1CH,2CH,4CH,6CH,8CH,11CH

Control Protocol: DMX

Support RDM

Color: White and black

• Each LED can pixel control.

Fan Mode: Max, Smart/Slient

Color temperature: 3000K~7600K

Compact and lightweight housing

XLR Connectors: Seetronic 3pin&5pin XLR Connector

Powercon True1 in/out

Work mode: Auto, DMX, Master/Slaver

• With handle and safe


Power input:110~240V,50/60Hz

Power Consumption:150W


• Size: 307x234x247mm

• Net Weight: 3.5KG

Product View

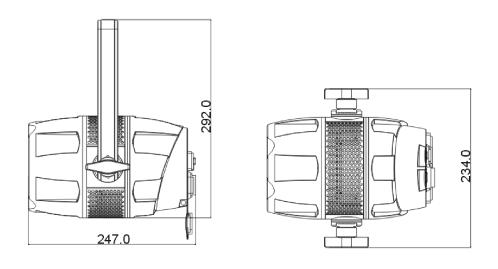

Product Description

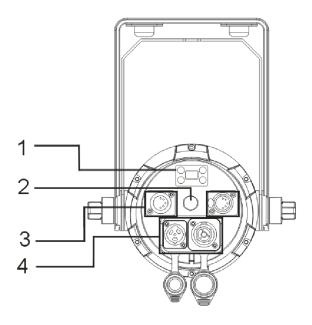

• 1: Menu

• 2:Pressure valve

- 3:DMX IN/ DMX OUT
- 4:POWER IN/POWER OUT

Control Panel

The control panel is the mechanism for configuring the LTP150 settings. It has a small LCD screen and four buttons, which are described below.

Button	Function
<menu></menu>	Scrolls through the first level of options, or exits from the current menu or function
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function

Menu Structure

DNAV				
DMX				
Address	001-512			
	1CH			
	2CH			
DMX	4CH			
Mode	6CH			
	8CH			
	11CH			
		Program 1	Dim	000-255
		Program 2	Speed	000-255
		Program 3		
		Program 17	MIXED	
Chand	ColorMacro	Color Off	000-005	
Stand Alone		Color1~46	006-255	
Alone	Manual	Dimmer	000-255	
		Strobe	0~30Hz	
		Red	000-255	
		Green	000-255	
		Blue	000-255	
		White	000-255	

			OFF	
		ССТ		00K/4500K/5500K/7500K
			Display	
	Display	On	Reverse	
	Reverse	Off	Normal	
		On	Normal	
	Display		Display off	
	Backlight		after 1	
		Off	minute	
			Keep the	
	DMAY Fail	Hold	last status	
	DMX Fail	Blackout		
		ManualMode		
		Standard		
		Stage		
	Dimmer	TV		
	Curve	Architectural		
		Theatre		
		Stage2		
	Dimmer	0.1-0.9s ~		
	Speed	1-10S		Only for stage2 curve
Cottings				
Settings	AutoLock	On		
	AUTOLOCK	Off		
		Smart		
	Fan Mode	Max		
		Silent		
		900Hz		
		1000Hz		
		1100Hz		
		1200Hz		
		1300Hz		
	PWM Rate	1400Hz		
	r WIVI Nate	1500Hz		
		2500Hz		
		4000Hz		
		5000Hz		
		6000Hz		
		10000Hz		
				Code: down, down, down, up, down,
	Service	Reset	Passcode	down,down, up
		Calibration	Passcode	Code: down, up, down, up, down,

			down, down.
	Firmwre	V1.0	
	Operation		
System	Hours	xxxHrs	
Info	Temperatur		
	e	xxx°C	
	RDM	ld number	

1 DMX Channels:

1 CH	VALUES	FUNCTIONS
000-255	000-255	Blinder Mode Channel 0%-100%, RedShift. Override other
		dimmer channel.

2 DMX Channels:

2 CH	VALUES	FUNCTIONS
1	000-255	MASTER DIMMER 0%-100%
		COLOR MACROS
2	000-007	No Effect
	008~255	Color 1 ~46

4 DMX Channels:

4 CH	VALUES	FUNCTIONS
1	000-255	RED 0%-100%
2	000-255	GREEN 0%-100%
3	000-255	BLUE 0%-100%
4	000-255	WHITE 0%-100%

6 DMX Channels:

6 CH	VALUES	FUNCTIONS
1		MASTER DIMMER 0%-100%

	000-255	RED
2		0%-100%
3	000-255	GREEN
3		0%-100%
4	000-255	BLUE
4		0%-100%
5	000-255	WHITE
5		0%-100%
		COLOR MACROS
	000-007	No Effect
	008~255	Color 1 ~46
		SHUTTER & STROBING
	000-031	LED Off
6	032-063	LED On
	064-095	Strobing Slow - Fast
	096-127	LED On
	128-159	Pulse Strobing
	160-191	LED On
	192-223	Random Strobing Slow - Fast
	224-255	LED On

8 DMX Channels:

8 CH	VALUES	FUNCTIONS
1	000-255	MASTER DIMMER
1		0%-100%
2	000-255	DIMMER FINE
		0%-100%
3	000-255	RED
3		0%-100%
4	000-255	GREEN
4		0%-100%
_	000-255	BLUE
5		0%-100%
_	000-255	WHITE
6		0%-100%
		SHUTTER & STROBING
7	000-010	LED on
/	011-020	LED Off
	021-030	Singe flash

	031-090	Strobing slow - fast
	091-100	LED ON
	101-170	Pulse strobing
	171-180	LED on
	181-240	Random strobing slow -fast
	241-255	LED On
	000-255	Blinder Mode Channel 0%-100%, RedShift. Override other dimmer
8		channel.

11 DMX Channels:

11 CH	VALUES	FUNCTIONS
1	000-255	MASTER DIMMER
1		0%-100%
2	000-255	DIMMER FINE
		0%-100%
3	000-255	RED
<u> </u>		0%-100%
4	000-255	GREEN
4		0%-100%
-	000-255	BLUE
5		0%-100%
_	000-255	WHITE
6		0%-100%
		SHUTTER & STROBING
	000-010	LED on
	011-020	LED Off
	021-030	Singe flash
	031-090	Strobing slow - fast
7	091-100	LED ON
	101-170	Pulse strobing
	171-180	LED on
	181-240	Random strobing slow - fast
	241-255	LED On
	000-255	Blinder Mode Channel 0%-100%, RedShift. Override other dimmer
8		channel.
9		COLOR MACROS

	000-007	No Effect	
	008~255	Color 1 ~46	
		DIMMER MODES	
	000-010	Default to Unit Setting	
	011-020	Standard	
	021-040	Stage	
	041-060	TV	
	061-080	Architectural	
	081-100	Theatre	
	101-120	Stage 2	
		DIMMER DELAY TIME	
	121	0.1Sec.	
	122	0.2Sec.	
	123	0.3Sec.	
	124	0.4Sec.	
	125	0.5Sec.	
10	126	0.6Sec.	
	127	0.7Sec.	
	128	0.8Sec.	
	129	0.9Sec.	
	130	1.0Sec.	
	131	1.5Sec.	
	132	2.0Sec.	
	133	3.0Sec.	
	134	4.0Sec.	
	135	5.0Sec.	
	136	6.0Sec.	
	137	7.0Sec.	
	138	8.0Sec.	
	139	9.0Sec.	
	140	10Sec.	
	141-255	Default to Unit Setting	
		REFRESH RATE	
	000-010	Default to Unit Setting	
11	011-020	900НZ	
	021-030	1000HZ	
	031-040	1100HZ	
	041-050	1200HZ	

	051-060	1300HZ
	061-070	1400HZ
	071-080	1500HZ
	081-090	2500HZ
	091-100	4000HZ
	101-110	5000HZ
	111-120	6000HZ
	121-130	10000HZ
	131-140	Set refresh rate to unit default
	141-150	Fan mode silent
	151-160	Fan mode smart
	161-170	Fan mode max
	171-180	Set fan mode to unit default
	181-255	No function

Troubleshooting

Following are a few common problems that may occur during operation.

Here are some suggestions for easy troubleshooting:

- 1. The unit does not work, no light and the fan does not work
 - a. check the connection of power and main fuse.
 - b. Measure the mains voltage on the main connector.
 - c. Check the power on Led.
- 2. Not responding to DMX controller
 - a. DMX LED should be on. If not ,check DMX connectors, cables to see if link properly.
 - b. If the DMX LED is on and no response to the channel, check the

- address settings and DMX polarity.
- c. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the unit or the previous one.
- d. Try to use another DMX controller.
- e. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.
- 3. Some units don't respond to the easy controller
 - a. You may have a break in the DMX cabling. Check the LED for the response of the master/slave mode signal.
 - b. Wrong DMX address in the unit .Set the proper address.
- 4. One of the channels is not working well
 - a. The stepper motor might be damaged, or the cable connected to the PCB is broken.
 - b. The motor's drive IC on the PCB might be out of condition.

5. Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: dirt, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

a. Clean with soft cloth using normal glass cleaning fluid.

b. Always dry the parts carefully.

Warranty

The LED Tour Par 150 fixture is guaranteed against manufacturing defects for the duration of two (2) years from the date of purchase.

This warranty does not cover the unit for evidence of physical shock or damage caused by abuse or any use not in accordance with the operating conditions set forth in the present user manual.

In addition, cosmetic defects caused by the normal wear and tear of the unit are not covered under the warranty.

Any modification to the fixture will void the warranty. We cannot under any circumstances be held liable for quality and conformity regarding the installation of this product, which is the responsibility of the installer. the device and before use, may be covered by the warranty.

The manufacturer is not responsible for any errors or omissions that may occur in this document. All information contained in this manual is subject to change without notice.